

CAMERA BATTERIES



CANON

Replaces	Voltage	mAh	Part	EAN
NB-9L	3.7	600	DBI9960A	5055190133842
NB-11L	3.7	600	DBI9975A	5055190138526

FUJIFILM

Replaces	Voltage	mAh	Part	EAN
NP-85	3.7	1640	DBI9978A	5055190139493
NP-W126	7.4	950	DBI9976A	5055190138847

NIKON

Replaces	Voltage	mAh	Part	EAN
EN-EL20	7.4	800	DBI9973A	5055190136935
EN-EL21	7.4	1200	DBI9985A	5055190140833

OLYMPUS

Replaces	Voltage	mAh	Part	EAN
LI-90B	3.7	1050	DBI9981A	5055190139936
BLM-5	7.4	1600	DBI9962A	5055190133866
LI-70B	3.7	550	DBI9951A	5055190123157

PANASONIC

Replaces	Voltage	mAh	Part	EAN
DMW-BCN10	3.7	770	DBI9991A	5055190141984
DMW-BCM13	3.7	1050	DBI9989A	5055190142004
DMW-BCL7	3.7	600	DBI9988A	5055190141908
DMW-BLF19	7.4	1600	DBI9987A	5055190141038
DMW-BLC12	7.4	1000	DBI9965A	5055190134504

PENTAX

Replaces	Voltage	mAh	Part	EAN
D-LI109	7.4	1050	DBI9958A	5055190199732

SAMSUNG

Replaces	Voltage	mAh	Part	EAN
BP88A	3.7	770	DBI9977A	5055190139004
BP1030	7.4	820	DBI9974A	5055190137116
BP85A	3.7	850	DBI9970A	5055190135105

SONY

Replaces	Voltage	mAh	Part	EAN
NP-BX1	3.7	1000	DBI9982A	5055190139929